

I. Company address

ASSTEC Assembly Technology GmbH & Co. KG
Saline 20
D – 78628 Rottweil

Phone +49 7 41.1 74 76-0
Fax +49 7 41.1 74 76-123
Email info@asstec.net
Web www.asstec.net

II. Relevant Articles

Article number 14387 CLEANlift synchronous control for 1-2 lifting columns
Article number 14388 CLEANlift synchronous control for 1-4 lifting columns

III. Installation instructions

1. Insert the standard DIN plug of the individual drives (SCT controllers can synchronously operate up to 4 motors) into the 8-pin M1, M2, M3, M4 sockets of the controller.
2. Now connect the 6-pin operator cable to the HS socket of the controller.
3. Plug the cable of the controller into the power socket.

IV. Initial operation

The controller must be initialized at the beginning. To this effect the “up” and “down” buttons should be kept pressed until all motors have reached the lower end positions, afterwards the buttons should be kept pressed for 3 seconds.

The controller confirms the initialization by beeping an acoustic signal 3 times. The controller is now ready for use.

V. Operation

Use the “up” and “down” buttons to drive the telescopic lifting column up and down.

Please contact the manufacturer in case of problems